



EN

EVAPORATIVE AIR COOLER

POLIFEMO BILLY




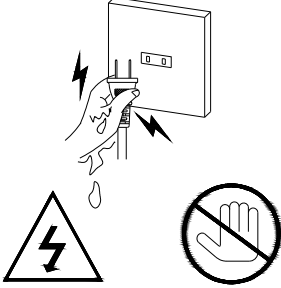 




OPERATING INSTRUCTIONS

Read the instructions carefully before operating the appliance or carrying out maintenance operations. Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage. Keep these instructions in a safe place for future reference.

GENERAL SAFETY INFORMATION


- Only use this appliance as described in this manual. Any other use not recommended by the manufacturer may cause
- fire, electric shock or injury to people.
- Make sure that the type of mains power complies with the electrical requirements of the appliance (220-240V~/50-60 Hz).
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety.
- Children shall not play with the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- Switch OFF and unplug the unit when the appliance is not used or for cleaning operations or for any maintenance.
- When not in use, disconnect the plug from the power outlet. Grasp the plug not the main power chord, when disconnecting the plug.
- Drain water inside the tank when not in use for a long time.
- Do not use the product in environments with temperatures above 50°C or below 0°C.
- Do not expose to direct sunlight.
- Remove the plug and switch off the product before filling the tank with demineralised water. Make sure the water is under the “MAX” line of water level indication.
- To transfer the unit, move it backwards, because the front wheels have a stop. Move slowly the unit to avoid any water splashing from the tank.
- Do not use the humidify function for a long time in airtight place (such as small closed room) to avoid too much humidity.
- Change the water frequently to keep it clean.
- This unit must be operated on stable and horizontal floor.
- This unit must not be exposed to dripping or splashing water.

 - Do not install the unit in a confined space, such a bookcase or built-in cabinet.
- Do not operate the unit near flammable liquids or explosive atmospheres.
- Do not put heavy objects on the unit, It might cause damages or malfunctions on the unit.
- **WARNING: DO NOT DEPEND ON THE ON/OFF BUTTON SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER. WHEN SERVICING OR MOVING THE FAN, ALWAYS UNPLUG THE POWER CORD.**
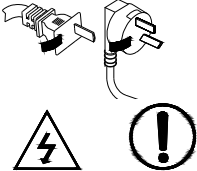
<p>In the event of any problems, switch off the appliance immediately, do not attempt to repair it, and take it to your local After-Sales Service Centre. Do not remove or replace individual parts, as this could affect product safety.</p>  <p>Do not disassemble the appliance!</p>	<p>Do not touch the power cord with wet or damp hands; risk of electric shock.</p>  <p>Warning!!! Do not touch Risk of electric shock!</p>
<p>Do not insert objects into the appliance grilles. This could cause leaks, short-circuits and damage to the product.</p>  <p>Warning!!! Do not touch Risk of electric shock!</p>	<p>Do not spray flammable substances or pesticides near the product as they could damage it.</p>  <p>Prohibited!</p>
<p>Do not use the appliance if the cord or plug is damaged. Do not attempt to change the power cord yourself. If the power cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.</p>  <p>Warning!!! Do not touch Risk of electric shock!</p>	<p>Do not bend or stand heavy objects on the power cord.</p> 

<p>Turn the switch off and unplug before carrying out any maintenance work or moving the appliance. Always unplug from the socket when the appliance is not in use.</p>	<p>To disconnect the appliance, press the OFF button and unplug from the socket. Only pull on the plug. Do not pull the cord. Otherwise the cable may be damaged or leaks, etc. may occur.</p>
<p>Do not pour water over the product: risk of short-circuits and damage to the product.</p>	<p>Do not leave the airflow directed towards children for long periods of time: it is not good for their health.</p>

 DESCRIPTION OF PARTS

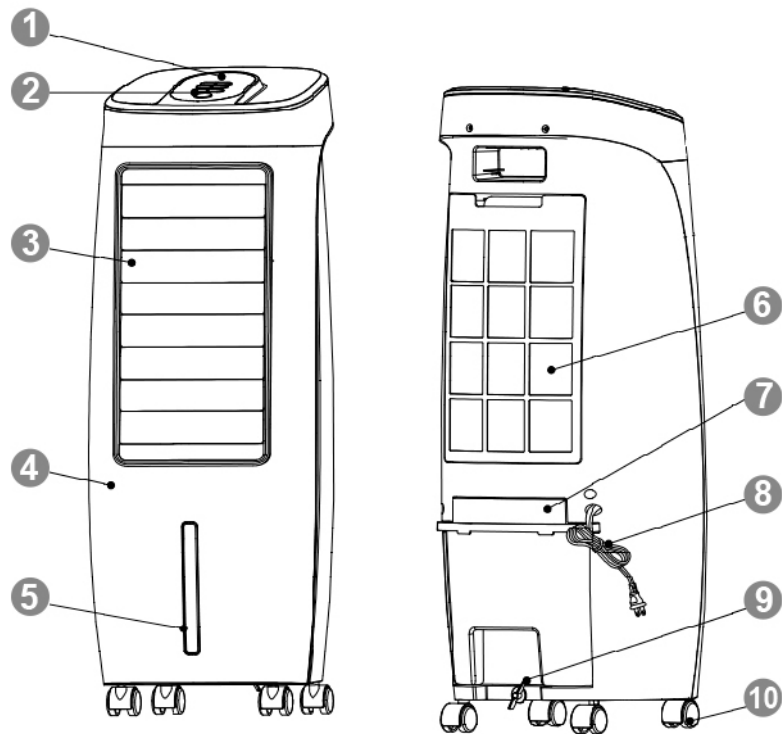

1. Top Panel
2. Control panel
3. Air outlet
4. Frontal panel
5. Water level display window
6. Air filter
7. evaporative panel
8. Power cord
9. Water tank lock
10. Casters

HOW TO USE THE APPLIANCE

The appliance does not need to be installed.

Position the unit on a flat, stable surface and connect the power cord to a suitable power socket (220-240 V~ 50-60 Hz): the appliance can be switched on using the ON/OFF button. The unit can be switched off using the OFF button and you will hear a sound.

When you move it, use the handle on the back. Do not use this cooler in an area with high humidity, rich in dust or with a temperature above 40 ° C.

This product can be used either as a fan, with 3 modes (Normal, Natural and Sleep) and 3 fan speed options (low, medium and high), or as a cooler/humidifier: in this case the rear tank should be filled with demineralized water, up to but not exceeding the maximum level as indicated.

 
As soon as the COOL function is activated, the fan speed drops to low, but 3 minutes after pressing the COOL key, the speed returns to the speed selected before pressing the COOL key.

When the water in the tank falls below the minimum level, marked on the tank, the appliance emits a continuous sound for a few seconds to signal a low water level, then cooling mode is stopped. The unit automatically shuts down when the tank is removed.

The fan takes in air from the room and passes it through the dust filter and the evaporative panel, which is constantly humidified thanks to a system which draws water from the tank and sprays it onto the panel. The incoming hot air makes part of the water contained in the panel evaporate and is therefore cooler when released back into the room, which makes it feel as though the temperature has dropped.


This appliance has the ionization function simultaneously with ventilation, which cannot be activated with any button since it is always in operation when ventilation is active, it is deactivated only when the appliance is switched off.

DISPLAY AND CONTROL PANEL

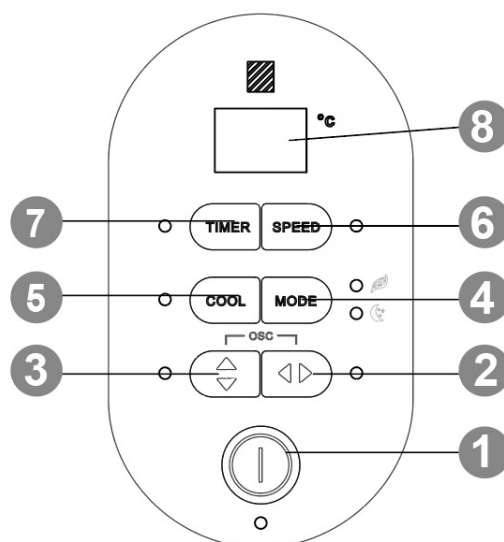

1. ON/OFF BUTTON
2. HORIZONTAL SWINGING
3. VERTICAL SWINGING
4. MODE BUTTON
5. COOL BUTTON
6. SPEED BUTTON
7. TIMER BUTTON
8. Display

 REMOTE CONTROL

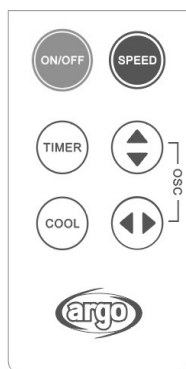

ON/OFF BUTTON

In power on state, press this button, the unit turns off and enters standby mode.
In power off state, press this button and it turns on.

SPEED BUTTON

In power state, press the SPEED button to switch among low, medium and high level.

COOL/HUMIDITY BUTTON

Press this button to turn on or turn off the "Cooler/Humidifier" mode: the LED lights up.

MODE BUTTON

In power on state, press this button to switch the working mode among Normal, Natural and Sleep.

- **Normal mode:** the unit runs at a constant speed setting;
- **Natural mode:** the unit runs at changing wind speed as set by the factory. In this mode the ventilation can be changed and the correspondent Led will light on the display.
- **Sleep mode:** the unit runs at changing wind speed as set by the factory. In this mode the ventilation can be changed and the correspondent Led will light on the display.

SWING BUTTON (OSC)

In power state, press this button to switch on/off the vertical and/or horizontal swinging of the flaps.

TIMER BUTTON

After turning on, the timer indicator is turned off by default and the digital tube displays ambient temperature; when the button is first pressed, the timer sets to 1 hour; the time increases by 1 hour when the button is pressed every time, and the timer can be set up to 8 hours; if the button is pressed again, the digital tube displays the room temperature, and the timer turns off; press the button again to repeat the cycle;

 
HOW TO INSERT / REMOVE THE REMOTE CONTROL BATTERIES (refer to the diagram below)

Open the battery cover on the back of the remote control (press and pull the cover).

Place the battery inside the cover, making sure the polarity is correct.

Slot the cover back into position on the remote control.

Use Lithium/Manganese button cells, model no. CR2025 -3 V, compliant with Battery Directive no. 2006/66/EC and amendments Directive 56/2013/EC (supplied with the remote control).

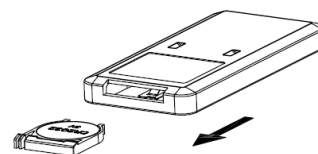


INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC and amendments former Directive 2013/56/EC


Please replace the battery when its electrical charge has been exhausted: at the end of its useful life, it must not be disposed of together with unsorted waste. It must be delivered to appropriate separated waste disposal plants or to dealers that provide a similar service. Separate waste disposal of batteries prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the battery. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.

FILLING THE WATER TANK

 
TANK MUST BE FILLED WITH DEMINERALIZED WATER FOR THE APPLIANCE TO OPERATE IN COOLER/HUMIDIFIER MODE.

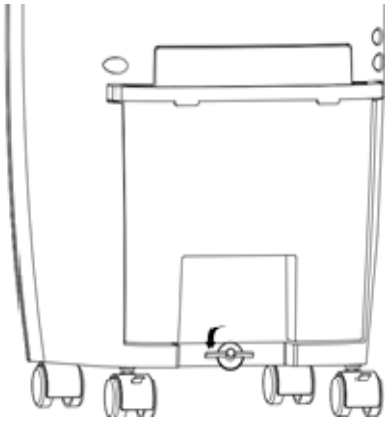


Opening Water tank

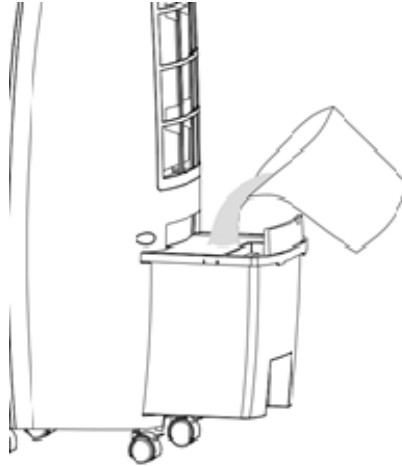 

 
Fill water tank with demineralized water

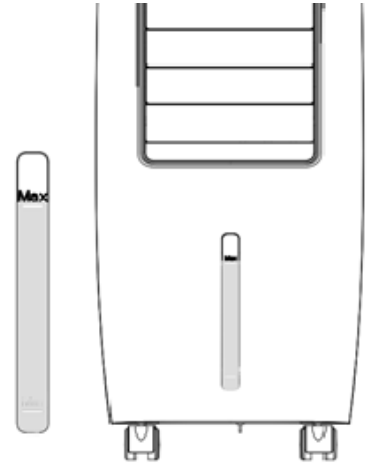

 Do not exceed the maximum limit indicated when filling the tank

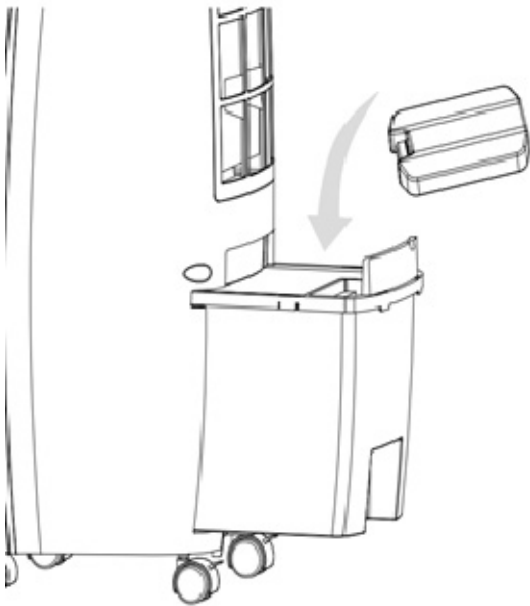

 Place the synthetic ice pack in the tank

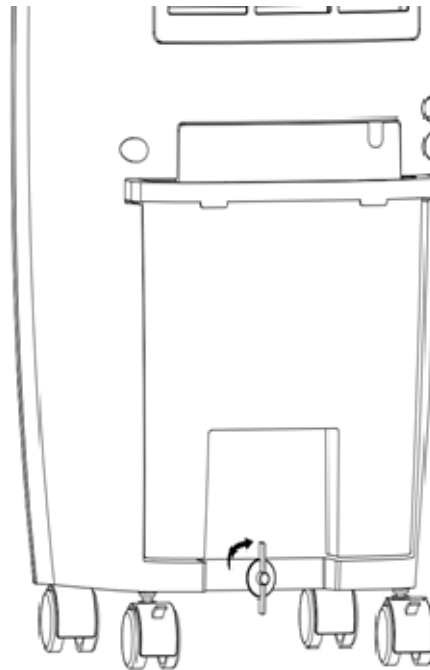

Close the water tank

 
Counter-rotate the tank knob by 90° and remove it from its slot; fill it with demineralized water, up to the maximum level mark. Reposition the tank and turn the knob.

If you wish to keep the water in the tank below room temperature in order to maximize cooling in warmer months, leave one of the two synthetic ice packs supplied in the freezer until solid, then add it to the water in the tank.

The ice will absorb heat from the water.

We recommend continuous use of the ice for optimal cooling capacity.

The first time it is used, you may detect a smell or the water may turn an unusual color: this does not constitute a health risk.

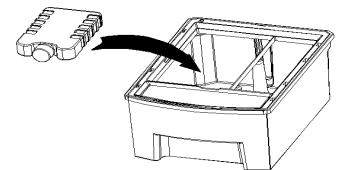

MAINTENANCE AND STORAGE

WARNING: ALWAYS UNPLUG THE APPLIANCE BEFORE CLEANING OR MAINTENANCE PROCEDURES.

IMPORTANT: DO NOT SUBMERGE THE PRODUCT IN WATER

Cleaning the outside surface of the appliance

Use a soft cloth to remove any dust from the product.

If this is not enough, use a soft cloth dampened with water and a mild detergent at a temperature not exceeding 50°C. Let the appliance dry completely before using it.

 
Do not use corrosive detergents or solvents such as petrol. Do not wash the appliance with water. Do not use oils, chemical substances or other items that may damage the surface to clean it.

Use a vacuum cleaner to remove dust from the air inlet/outlet grilles.

Cleaning the dust filter, the cooling panel and the tank


Clean the dust filter frequently, at least once a month.

Remove the dust filter by pulling the knob on the cooling panel, as indicated in the diagram below.

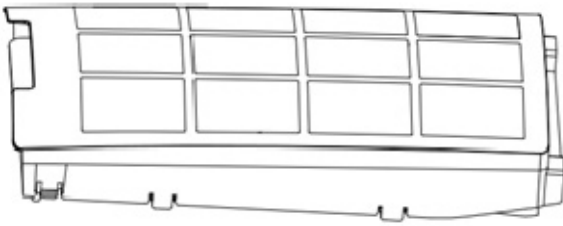

Clean the dust filter using a soft brush or a vacuum cleaner, and wash it in a solution of water and mild detergent.

 Remove the cooling panel at the same time and soak it in a solution of water and mild detergent.

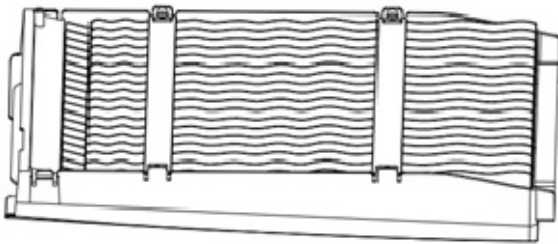

Let the filter, the panel and the tank dry completely after washing them; then re-fit the components in the following order: water tank, cooling panel and dust filter

Cleaning the water tank

Take out the tank and rinse it under running water, removing any residue.

Clean the water tank twice a week.

STORAGE

If the appliance is not used for prolonged periods, disconnect the power cord and store the appliance with this manual in its original packaging, in a cool and dry place.

Before packaging, the honeycomb filter and dust-proof filter should be dry, and there is no water in the tank.



INFORMATION FOR THE CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2012/19/EU

This appliance may not be scrapped with domestic waste at the end of its life cycle. We call your attention to the crucial role played by the consumer in the re-use, recycling and other forms of recovery of such waste.

The appliance must be scrapped by a sorted waste disposal centre or by returning it to the retailer (no charge is levied for this service), when you purchase a new equivalent appliance.

Sorted disposal of electric and electronic equipment prevents the negative effects on the environment and human health resulting from improper scrapping, and also allows the materials from which it is made to be recovered and recycled, with significant savings in terms of energy and resources. The sorted disposal requirement is indicated by the crossed waste bin label affixed to the appliance.



improve your life

www.argoclima.com