



EN

MOSQUITO KILLER

 *Serotino*



OPERATING INSTRUCTIONS

Read the instructions carefully before operating the appliance or carrying out maintenance operations. Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage. Keep these instructions in a safe place for future reference.

GENERAL SAFETY INFORMATION

- Use this mosquito killer only as outlined in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to people.
- **THIS APPLIANCE CAN BE USED BOTH INDOOR AND OUTDOOR.**
- **INSIDE THERE IS A RECHARGEABLE BATTERY: ONCE CHARGED, THE UNIT CAN BE USED WITHOUT ELECTRICAL CONNECTION, FOR 6-7 hours.**
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- This appliance is not suitable for use by people (including children) with reduced physical, sensory or mental abilities, or without the necessary experience and knowledge, unless they have been adequately supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Do not cover the appliance or restrict the air inlet and outlet grilles.
- Ensure that all objects are at least 1 meter from the front and sides of the appliance.
- Disconnect the mains power when the appliance is not used or for cleaning operations.
- Avoid using the mosquito killer in dusty environments or in the presence of inflammable vapors (e.g. in workshops or garages) or paint vapors.
- Do not place anything on the appliance, do not use the appliance to dry clothing.
- Use the appliance in a well-ventilated area.
- Avoid placing fingers or foreign objects in the air inlet/outlet grilles, as this may lead to electric shock or fire and may damage the appliance.

WARNING: ELECTRIC SHOCK DANGER. DO NOT TOUCH INTERNAL GRIDS.

The symbol below signals the above warning:



- To avoid the risk of fire, do not block the grilles or tamper with them in any way while the mosquito killer operates.
- Do not connect the transformer to recharge the appliance to the mains power before it has been properly assembled and positioned.
- Do not use the appliance if the cord or plug are damaged. If the power supply cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.
- Do not operate the appliance if it has fallen from a height or has suffered damage in any way. Contact qualified technical personnel to examine the appliance or perform any electrical or mechanical repairs.
- The most common cause of overheating is the build-up of dust in the appliance. Remove dust deposits by unplugging the appliance and cleaning the air outlets and grilles with the aid of a vacuum cleaner.
- Do not use abrasive detergents for cleaning this appliance. Clean the appliance with the aid of a damp (not wet) cloth rinsed in hot soapy water. Always remove the plug from the mains socket before cleaning.
- Do not place any objects on the cord and do not bend it.
- Do not immerse the cord, plug or any other element of the appliance in water or other liquids.
- Do not touch the plug with wet hands.
- Do not place the mosquito killer above or near another heat source.
- The mosquito killer may cause the risk of fire if, while in operation, is covered by or comes into contact with **inflammable** material including curtains, drapery, blankets, etc. **KEEP THE MOSQUITO KILLER AWAY FROM THESE MATERIALS.**
- Do not run the cord under carpets. Do not cover the cord with blankets, carpets or similar materials. Place the cord far away from busy areas or where it cannot be accidentally pulled-out.
- Installing suspended: keep a safe distance from the floor and place the mosquito killer in an area where it cannot be accidentally bumped.
- Do not operate the mosquito killer in close proximity to bathtubs, showers, washbasins or pools.
- Do not position the mosquito killer below a socket outlet.

WARNING: DO NOT DEPEND ON THE ON/OFF BUTTON SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER. WHEN SERVICING OR MOVING THE MOSQUITO KILLER, ALWAYS UNPLUG THE POWER CORD.


- A mosquito killer has hot and arcing or sparking parts inside. It must not be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmosphere.
- Do not place the mosquito killer on soft surfaces, like a bed, where openings may become blocked. Always place the mosquito killer on a stable, flat, level surface when operating, to avoid the chance of the overturning. Locate the power cord so the mosquito killer or other objects are not resting on it.
- Always unplug the mosquito killer when not in use.
- In order to avoid accidents turn unit off if unattended.
- In the event of any problems (abnormal noise or a strange smell) switch off the appliance immediately, do not attempt to repair it and take it to your local after sales service.

WARNING: DO NOT TO BREAK THE UV-A LAMP. It contains mercury that must not be released into the environment.

DESCRIPTION OF PARTS



1. Upper hook
2. UV-A lamp
3. High voltage grid
4. Transformer
5. ON/OFF switch

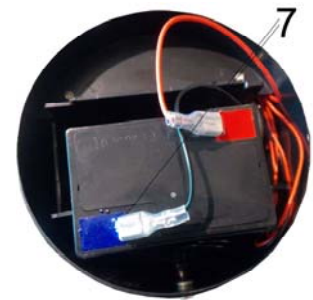

6. Rechargeable battery
7. Battery terminals

HOW TO USE THE APPLIANCE

This portable mosquito killer emits low power ultraviolet rays (UV-A) to attract light sensitive flying insects, such as flies, moths, mosquitoes. These insects are electrocuted by metal grids electrically charged and subsequently fall to the bottom of the device from where they can be removed. No chemicals, smells, sprays, dusts, vapors are used.

Mosquito killers are pollution free and harmless to people and animals.

Do not use this mosquito killer in an area with high humidity, full of dust or water.

This mosquito killer is powered through a lead rechargeable battery contained in the lower part of the appliance. The rechargeable battery is not connected to the product. Connect the terminals (red to red etc.) as shown before operating the product, and then insert the battery into the bottom. The battery lasts about 6/7 hours. The battery is recharged by plugging in the transformer into the product and connecting it to a suitable power outlet (230 V ~). The charging time is approximately 10 hours.

INSTALLING SUSPENDED

Hang the mosquito killer using the upper hook provided and keep a safe distance from the floor. Place the mosquito killer in an area where it cannot be accidentally bumped.

INSTALLING ON A SURFACE

Place it on the ground or on a table, in any case a flat and stable surface.

INDOOR USE

Close the windows and doors and turn the lights off.

Place the mosquito killer in a dark corner of the room.

OUTDOOR USE

This mosquito killer is suitable for camping and outdoors.

This mosquito killer can not be used when it's raining.

ON/OFF SWITCH

Pressing the ON/OFF switch the appliance turns on and begins to operate.

To switch off the mosquito killer press the button again.

MAINTENANCE AND STORAGE

ALWAYS UNPLUG AND DISCONNECT THE TRANSFORMER FROM THE APPLIANCE BEFORE CLEANING OR MAINTENANCE.

IMPORTANT: DO NOT SUBMERGE THE MOSQUITO KILLER IN WATER.

CAUTION: RISK OF ELECTRIC SHOCK. DO NOT TOUCH THE INTERIOR GRIDS.

The symbol below signals the above warning:



Cleaning the outside surface of the appliance

Use a soft cloth to remove any dust from the mosquito killer.

If the mosquito killer is excessively dirty, use a soft cloth moistened with water and a mild detergent at a temperature lower than 50°C. Let the mosquito killer dry completely before use.

Do not use corrosive detergents or solvents such as petrol. Do not wash the appliance with water. Do not use oils, chemical substances or other items to clean that may damage the surface.

Use a vacuum cleaner to remove dust and insects from the air inlet/outlet grilles.

STORAGE

If the appliance is not used for prolonged periods, disconnect the power cord and store the appliance with this manual in its original packaging, in a cool and dry place.

INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2002/96/EC



When this appliance reaches the end of its useful life, it must not be disposed of with household waste. It must be delivered to appropriate separated waste disposal plants or to dealers that provide a similar service. Separate waste disposal of an electrical appliance prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the product. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.



www.argoclima.com