



EN

MISTING FAN

POLIFEMO BRIZO




OPERATING INSTRUCTIONS


Read the instructions carefully before operating the appliance or carrying out maintenance operations.
Observe all the safety instructions; failure to observe the instructions may lead to accidents and/or damage.

GENERAL SAFETY INFORMATION

- Only use this appliance as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to people.
- Make sure that the type of mains power complies with the electrical requirements of the appliance (220-240 V~/50 Hz).
- This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- Disconnect the mains power when the appliance is not used or for cleaning operations.
- This product is only for household use

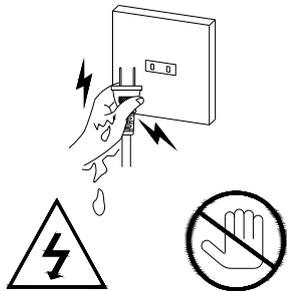
<p>In the event of any problems, switch off the appliance immediately, do not attempt to repair it, and take it to your local After-Sales Service Centre. Do not remove or replace individual parts, as this could affect product safety.</p>  <p>Do not disassemble the appliance!</p>	<p>Do not touch the power cord with wet or damp hands; risk of electric shock.</p>  <p>Attention!!! Don't touch!!!! Rischio di scossa elettrica!</p>
--	--

Do not insert objects into the appliance grilles. This could cause leaks, short-circuits and damage to the product.

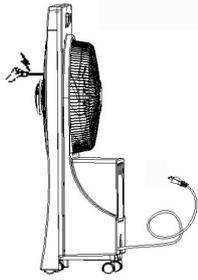


Warning!!! Do not touch
Risk of electric shock!

Do not spray flammable substances or pesticides near the product as they could damage it.

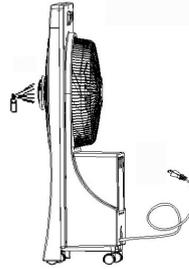


Prohibited!

 Do not use the appliance if the cord or plug is damaged. Do not attempt to change the power cord yourself. If the power cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.



Warning!!! Do not touch
Risk of electric shock!

Do not bend or stand heavy objects on the power cord.

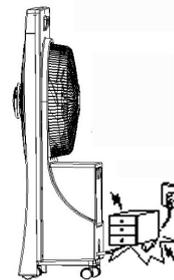


Warning!!! Do not touch
Risk of electric shock!

Turn the switch off and unplug before carrying out any maintenance work or moving the appliance. Always unplug from the socket when the appliance is not in use.




Compulsory!

To disconnect the appliance, press the OFF button and unplug from the socket. Only pull on the plug. Do not pull the cord. Otherwise the cable may be damaged or leaks, etc. may occur.

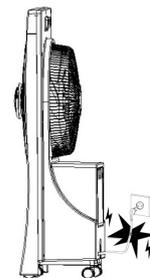


Warning!!! Do not touch
Risk of electric shock!

Do not pour water over the product: risk of shortcircuits and damage to the product.

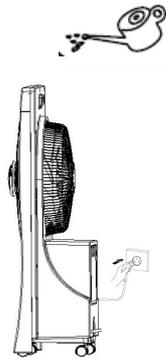

Warning!!! Do not touch
Risk of electric shock!


Do not leave the airflow directed towards children for long periods of time: it is not good for their health.

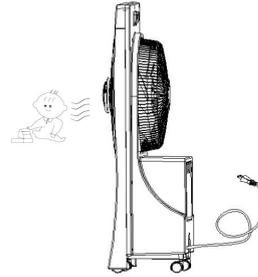

Prohibited!


DESCRIPTION OF PARTS

FRONT VIEW

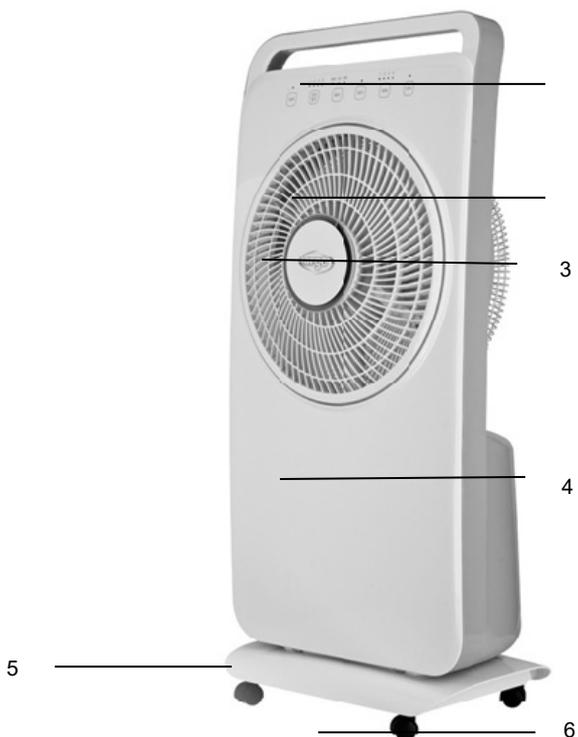

1. Soft touch control panel
2. Air guide louver
3. Mist disk
4. Front panel
5. Base
6. Castor

REAR VIEW

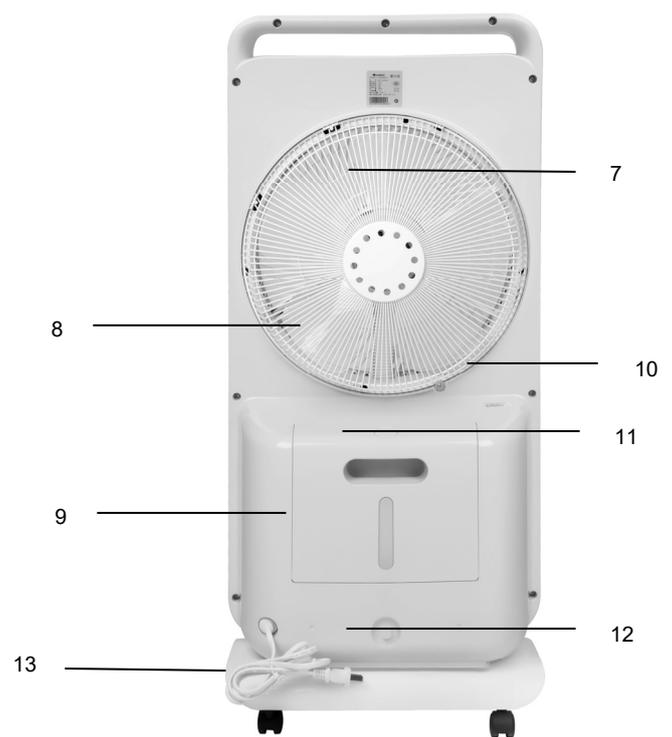

7. Rear grille
8. Blade
9. Water tank
10. Rear panel
11. Push for tank opening
12. Drain plug
13. Power cord

HOW TO USE THE APPLIANCE

The appliance does not need to be installed.

When the product is used for the first time, tear off the tape stuck on the unit and take out the paper tube in the water tank. Position the unit on a flat, stable surface and connect the power cord to a suitable power socket (220-240 V~/50HZ). When you move the appliance, use the handle on the back do not tilt or shake the unit to prevent the water from overflowing. Do not use this product in an area with high humidity, rich of dust or with a temperature exceeding 40° C. This product can be used both as a fan, with 4 modes (Normal, Nature and Sleeping) and 4 fan speed options and as nebulizer.


MISTING FUNCTION

In this case the rear tank should be filled with **demineralized water**, up to but not exceeding the maximum level as indicated.

Through a high-frequency vibration (not audible and not harmful to people) the water under the tank is nebulized and sucked into the tube up to the misting plate where it is emitted into the room.

There is no need to heat or to add any chemical agent. The refreshing action of water can give a sense of well-being when the environment is dry. It's not possible to activate the misting function without water in the water tank. Do not fill the water directly on water channel or in the mist outlet, do not block the mist outlet during operation. When the water below the tank falls below the minimum level, the appliance emits a sound and the nebulizer switches off.

CONTROL PANEL AND AVAILABLE FUNCTIONS

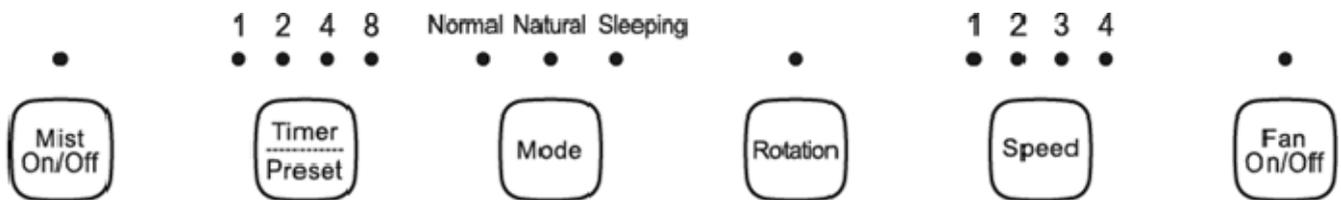

All the buttons on the control panel are touch-sensitive: a light touch is enough to select the functions.

FAN ON/OFF: After putting through the power, touch the button Fan On/Off to turn on or turn off the fan.

MODE setting: Under unit on status, touch this button to change the sequence Normal -> Natural -> Sleeping with corresponding indicator on.

- Normal: Fan speed is constant
- Natural: Fan speed will automatically change, alternating periods of low, medium and high speed
- Sleeping: Fan speed will automatically change, alternating periods of low, medium and high speed according to preset program. The unit is defaulted to be turned off after 8 hours if any operation is performed.

SPEED: There are 4 ventilation speed: 1, 2, 3, 4. Under unit on status, touch with button to increase the fan speed from 1 (minimum speed) to 4 (maximum speed) with the corresponding indicator on. Touching again speed 4 it returns to speed 1.

TIMER/PRESET:

TIMER: Under unit on status, touching button Timer/Preset on control panel or on remote control, will be possible to set the timer off time in the sequence of 1 -> 2 -> 3 -> 4 -> 5 -> 6 -> 7 -> 8 -> cancel. The corresponding indicator will be on on the panel.

PRESET: Under stand by status, touching the button Timer/Preset on the control panel or on the remote control will be possible to set the number of hours after which the product will start working with the following sequence (expressed in hours of operation) 1 -> 2 -> 3 -> 4 -> 5 -> 6 -> 7 -> 8 -> cancel. The indicator corresponding the selected sequence will be on on the panel.


MIST ON/OFF: Under unit on status touch this button to turn on or turn off this function. Humidity function it remains activated even when the operating period ends. The timer must therefore be deactivated manually if you do not wish it to remain active. Mist does not have Timer and Preset setting.

ROTATION: Under unit on status touch this button to turn on or turn off the grille rotation, the indicator will be on on the panel.

DISPLAY OFF Function: Under working status, if there is no operation after 40s, all the indicators will turn off. Press any button (except Fan ON/OFF button) to reactivate the indicator.

AUTO OFF Function: If there is no operation for consecutive 15h under any working status (except Sleeping mode) the unit will be turned off automatically.

REMOTE CONTROL

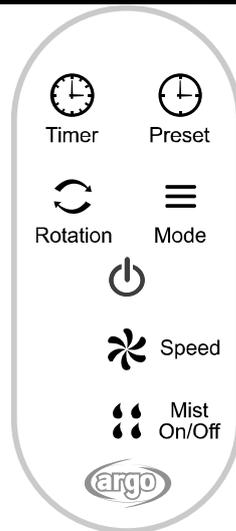

The functions of the remote control correspond exactly to the functions of the control panel.

REMOTE CONTROL OPERATION


1. Slide the cover open in the direction indicated by the arrow.
2. Insert the batteries (AAA, LR03, 1,5 V - not provided) into the remote control and make sure the poles match.
3. Put the cover back on.
4. Point the remote control towards the receiver on the air conditioner.
5. The remote control should be positioned within 6 metres from the receiver.
6. There must be no obstacles between the remote control and the receiver.
7. Do not drop or launch the remote control.
8. Do not leave the remote control under strong sunlight or heating devices and other source of heat.
9. Remove the batteries from the remote control when the latter is not used for a long time.
10. If no sound is heard and the transmission symbol on the display does not flash, the batteries must be

replaced.

11. If the system resets when the remote control button is pressed, the electrical signal is poor and the batteries must be replaced.
12. Flat batteries must be disposed of correctly.

N.B.:

* The image depicts a general remote control, which contains nearly all the function keys. These may be of a slightly different material (depending on the model).

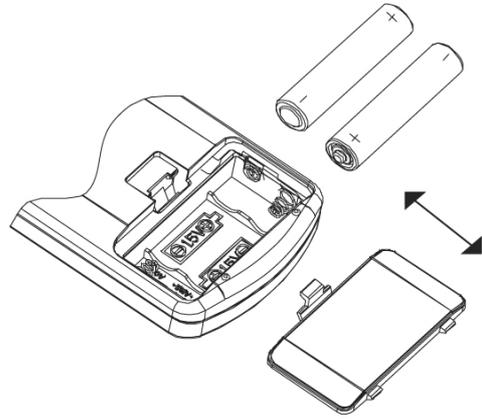


INFORMATION FOR THE CORRECT DISPOSAL OF BATTERIES IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC and amendments Directive 2013/56/EC

Replace batteries when they are depleted. At the end of their life, batteries must be disposed of separately from unsorted waste. They must be taken to designated recycling centres or returned to a retailer providing this service. Separate disposal of batteries prevents potential negative effects on the environment and human health due to inadequate disposal, and also allows for recovering and recycling their constituent materials, resulting in significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the battery. Illegal disposal of the product by the user implies administrative sanctions applied as per current regulations.

FILLING THE WATER TANK


THE TANK MUST BE FILLED WITH DEMINERALIZED WATER IN ORDER TO OPERATE THE APPLIANCE IN MISTING MODE.

Place the unit on a stable and flat surface, to fill the tank follow the instructions below:
Press the button on the upper side of the tank and remove it from its seat.

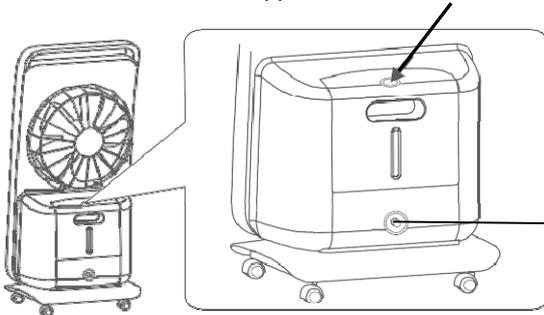


Plug to be unscrewed to drain the water generated by the humidification process

Unscrew the cap of the tank, fill it with clean demineralized water up to the maximum limit indicated on the tank and close the cap.

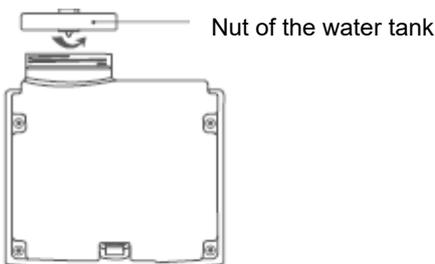

Reposition the tank in its seat and close.

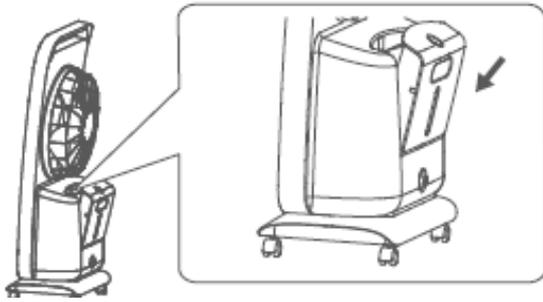

MAINTENANCE AND STORAGE

WARNING: ALWAYS UNPLUG THE APPLIANCE BEFORE CLEANING OR MAINTENANCE PROCEDURES.

IMPORTANT: DO NOT SUBMERGE THE PRODUCT IN WATER.

Cleaning the outside surface of the appliance

Use a soft cloth to remove any dust from the product.

If this is not enough, use a soft cloth dampened with water and a mild detergent at a temperature not exceeding 50°C. Let the

appliance dry completely before using it.

Do not use corrosive detergents or solvents such as petrol. Do not wash the appliance with water. Do not use oils, chemical substances or other items that may damage the surface to clean it.

Use a vacuum cleaner to remove dust from the air inlet/outlet grilles.

Cleaning the tank

Take out the tank once removed and fill it with water, shake it, empty it, repeat this operation several times.

Dry the tank with a cloth.

Water tank must be changed every day.

STORAGE

If the appliance is not used for prolonged periods, disconnect the power cord and store the appliance with this manual in its original packaging, in a cool and dry place. Remove the battery of remote control in case of prolonged activity.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTION
Mist On/OFF indicator flickers, buzzer beeps, no mist	<ul style="list-style-type: none"> - No water in the water tank, water-lacking protection - The whole unit inclines, so that the float in the low water level - Enter protection mode 	<ul style="list-style-type: none"> - Fill water to the water tank - Place the unit on a flat and solid surface and keep it stable - Pull out the plug of power cord and insert the plug again
There is water accumulated on the floor after activating Mist function for a while	The air circulation in the environment is not adequate and the humidity in the environment is high, therefore the water particles cannot spread and accumulate on the floor near the unit	<ul style="list-style-type: none"> - Keep good air circulation or turn on the fan function - It's recommended to not turn on the humidification function when the ambient humidity is high
Water leakage at the base	<ul style="list-style-type: none"> - During the moving the unit, the unit shakes too much or inclines too much - Water tank has cracks 	<ul style="list-style-type: none"> - When moving the unit, keep the unit stable and make sure it is in small inclination angle - Bring the unit to the maintenance center to replace the water tank



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2002/96/EC

When this appliance reaches the end of its useful life, it must not be disposed of with household waste. It must be delivered to appropriate separated waste disposal plants or to dealers that provide a similar service. Separate waste disposal of an electrical appliance prevents potential negative effects on the environment and human health resulting from inadequate disposal, and also allows the materials from which it is made to be recovered and recycled in order to achieve significant savings in terms of energy and resources. The separate

disposal obligation is underlined by the crossed-out dustbin symbol appearing on the product. Illegal disposal of the product by the user shall result in the application of administrative sanctions as defined by current regulations.



www.argoclima.com

MADE IN CHINA