

ZEN

LIGHT

ROSE

ESSENTIAL OIL DIFFUSER

EN



improve your life

CONTENTS:

- A. FUNCTION
- B. SPECIFICATION
- C. OPERATION
- D. MAINTENANCE
- E. TROUBLESHOOTING

**A**

FUNCTION

This essential oil diffuser, characterized by a captivating, innovative design, releases a blend of cold steam and perfumed essential oils into the air, helping improve our wellbeing through aromatherapy.

Certain perfumes act on the central nervous system and activate biochemical processes able to restore a sense of wellbeing.

Under the richly enhanced effect as aromatherapy, your nerve would be eased gradually and your skin would be moisturized at the same time.

B

SPECIFICATION




Product Size: Ø 150x128mm

Voltage: 24V DC

Power: 12 Watt

Water Tank Capacity: 80ml

01. Vent Hole
02. Ceramic Disc
03. Water Tank
04. Vapour diffusion cone
05. Max. Water Level Line
06. Water-Dumping Indication
07. Mist Outlet
08. ON/OFF & operation Button
09. DC Jack
10. Switching Adaptor

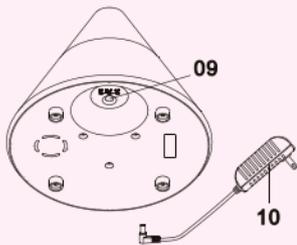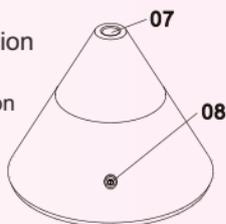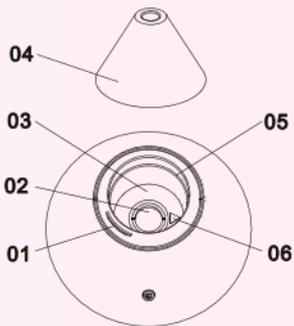




C

OPERATION

IMPORTANT NOTES BEFORE USE:

- * Only use the product as described in this manual.
- * Before plugging in, ensure that voltage is correct.
- * The product must be positioned on a flat, stable surface. To avoid risk of electric shock, short circuit and fire, do not use the appliance if the power cord is damaged or if the electrical socket has worked loose.
- * Do not use detergents, solvents or aggressive agents to clean the product.
- * Do not use corrosive fragrances such as citrus fruits, citronella or lemon as these may permanently damage the product.
- * Only use clean water at room temperature to fill the tank. as these may permanently damage the product.
- * Always unplug before maintaining or cleaning the appliance. Never touch the plug or diffuser with wet hands.
- * Do not use the appliance outdoors. Do not immerse in water or other liquids. Keep away from showers, baths or similar places.
- * To disconnect the appliance, press the button until it turns off and unplug grasping the plug and not the cord. Do not use extensions.

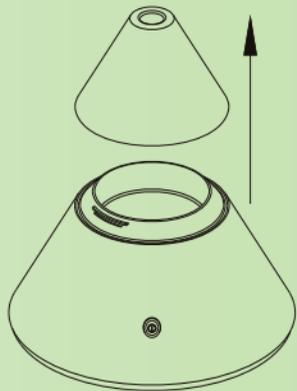


1. Remove the diffusion cone




2. Fill the water tank with clean water (Maximum 80ml.)



3. Add 3-5 drops of your favourite essential oil into the water

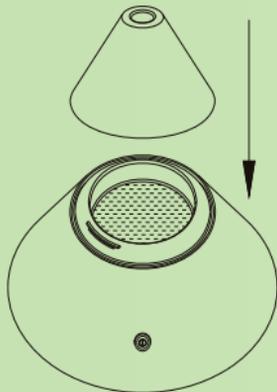

4. Replace the diffuser cone

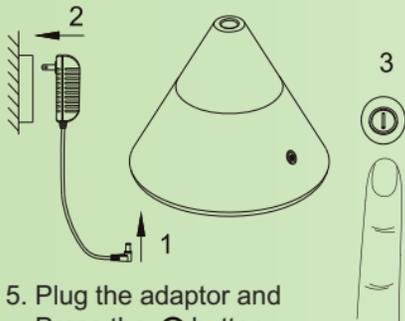

5. Plug the adaptor and
Press the ⓐ button



NOTE: Do not tilt the essential oil diffuser nor attempt to empty or fill it when it is operating.


Switch pressure sequence / Functions




D

MAINTENANCE

WARNING! Always unplug before carrying out maintenance work!

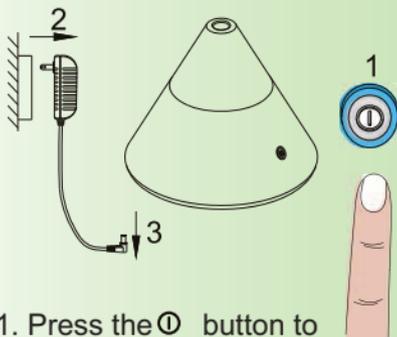

1. Press the  button to turn off the unit and unplug the adaptor

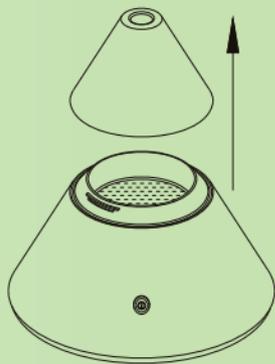

2. Remove the diffusion cone

3. Empty water following the water dumping indication




WARNING:
DO NOT EMPTY WATER
THROUGH THE VENT HOLE

4. Use a damp cloth to clean the exterior of the housing.
Use a clean cloth to clean the water tank.

Empty and rinse the water tank and wipe it dry with a clean cloth every time you use a different type of essential oil.

5. If the appliance is not used for prolonged periods, it must be stored together with this manual in its original packaging, in a cool and dry place.

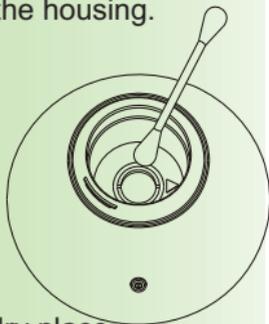

**E**

TROUBLESHOOTING

| <i>Problem</i> | <i>Possible Cause</i> | <i>Solution</i> |
|-----------------------|---|---|
| <i>No Mist</i> | Power supply is not connected | Plug the power and press the  button |
| | Insufficient water | Refill water till water is sufficient |
| | Too much water (exceed 80ml) | Pour away excess water |
| | Mist outlet is blocked by water film or sundries | Keep the mist outlet ventilated |
| | The ceramic disc is aging after running for approx. 3.000 hours | Please contact an authorized technical service centre. |

WARNING:



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2002/96/EC

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

- * In the event of anomalous situations such as smoke, unusual odours, unpleasant sounds, etc., continued use may lead to accidents such as fires, electric shock, etc.. unplug and contact an authorised technical service centre.
- * Never wrap the plug in cloth or paper. This could cause the heat to dissipate incorrectly and lead to its deformation or risk of fire.
- * Do not tamper with the product. If the appliance needs to be repaired or a damaged power cord requires replacement, contact an authorised service centre.
- * Keep the appliance away from children and the disabled in order to avoid incidents and electric shocks.
- * When not in use for long periods, remove the plug from the from the socket.
- * **Do not use the appliance with adaptors other than that supplied with the product.**