



 
improve your life

CE

EN

PURY TOWER

TOWER FAN WITH PURIFICATION

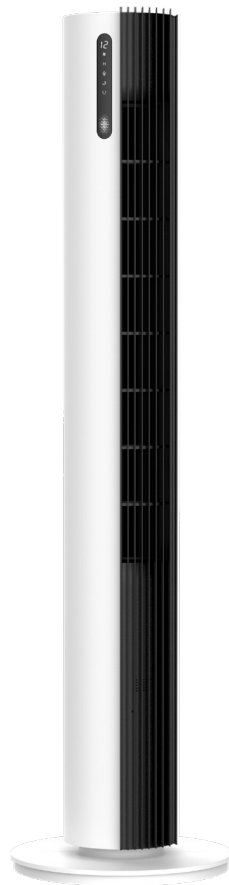

OPERATING INSTRUCTIONS

Read the instructions carefully before operating the appliance or carrying out maintenance work. Observe all the safety instructions; failure to do so may lead to accidents and/or damage. Store these instructions in a safe place for future reference.

GENERAL OPERATING AND SAFETY INSTRUCTIONS

- Use this fan only as described in this manual. Any other use not recommended by the manufacturer can cause fires, electric shocks, or personal injury.
- Make sure that the type of power supply complies with the electrical demands of the fan (220-240V~50-60Hz).
- This product is not a toy. Children must be duly supervised to ensure that they do not play with the appliance.
- Children must not play with the appliance
- This appliance can be used by children of at least 8 years of age and by people with reduced physical, sensory or mental capabilities, or with lack of experience or knowledge, if they have been able to benefit, through the intermediation of a person responsible for their safety, supervision or instructions regarding the use of the fan and therefore have understood the possible risks inherent to it.
- Cleaning and maintenance intended to be carried out by the user must not be carried out by children without supervision.
- Do not restrict the air inlet and outlet grilles.
- Disconnect the mains power supply when not in use or cleaning.
- Do not place anything on the product; do not hang wet clothes on the fan.
- Do not allow fingers or foreign objects to enter the air inlet or outlet grilles as this may cause an electric shock or fire or damage the fan.
- To prevent fire, do not block or tamper with the grilles in any way while the fan is in operation.
- **Do not use the appliance if the cord or plug is damaged.** If the power cable is damaged, it must be replaced by the manufacturer or its technical assistance service or in any case by a person with similar qualifications, in order to prevent any risk.
- Make sure the appliance is disconnected from the mains before removing any component.
- Do not use the fan if it has been dropped from a height or damaged in any way. Contact a service center to have the fan checked or to carry out electrical or mechanical repairs.
- The most common cause of overheating is the accumulation of dust in the unit. Remove accumulations of dust by unplugging and cleaning the

grids with the help of a vacuum cleaner.

- Do not use abrasive products to clean the appliance. Clean it with the help of a damp (not wet) cloth and let it dry completely before putting it away. Remove the plug from the socket before doing maintenance.
- To disconnect the fan, turn the switch to the OFF position and remove the plug from the outlet. Just pull the plug. Do not pull the cord when turning off the fan.
- Do not place anything on the power cord or bend the cord.
- The use of extension cords is not recommended, because the extension cord could overheat and cause a risk of fire. Never use a single extension cord to operate more than one appliance.
- Do not immerse the cord, plug or any other element of the appliance in water or other liquids.
- Do not touch the plug with wet hands.
- Do not place the fan on or near another heat source, such as stoves, radiators, or other heat-producing appliances.
- Avoid exposing the device to direct sunlight.
- Do not connect the fan to the power supply until it has been correctly assembled or positioned.
- Do not run the cord under carpets. Do not cover the cable with blankets, carpets or the like. Place the cord away from busy areas or where it cannot be accidentally pulled out.
- Keep flammable materials such as furniture, cushions, blankets, papers, clothes, curtains and so on at a distance of 1 m from the front, sides and rear.
- Do not use the fan in dusty environments or in the presence of flammable vapors (for example in a workshop or garage).
- A fan has parts inside that generate arcs or sparks. It should not be used in areas that could be hazardous such as areas with risk of fire, explosion, chemical laden or moisture laden atmosphere.
- Do not use the fan in the immediate vicinity of bathtubs, showers, washbasins and swimming pools.
- Use the fan in a well-ventilated area.
- Do not place the fan under an outlet.
- Do not use outdoors.

 
ATTENTION:

THE ON/OFF SWITCH IS NOT THE ONLY MEANS TO DISCONNECT THE POWER SUPPLY.

IN THE EVENT OF NOT USING, MOVING OR MAINTAINING THE APPLIANCE, ALWAYS UNPLUG THE PLUG FROM THE SOCKET.

- Do not use the appliance on soft surfaces, such as a bed, where the grids may be covered. Always place the fan on a stable, level surface when in operation to prevent the fan from tipping over. Place the cable so that the fan or other objects do not rest on it.
- Always pull the plug when the appliance is not in use.
- In order to avoid accidents, switch off the unit when unattended.
- In the event of anomalies (anomalous noise or a strange smell), switch off the appliance immediately, do not attempt to repair it and take it to the local authorized technical assistance centre.
- Use the handle on the back to move the product.

DESCRIPTION OF THE APPLIANCE

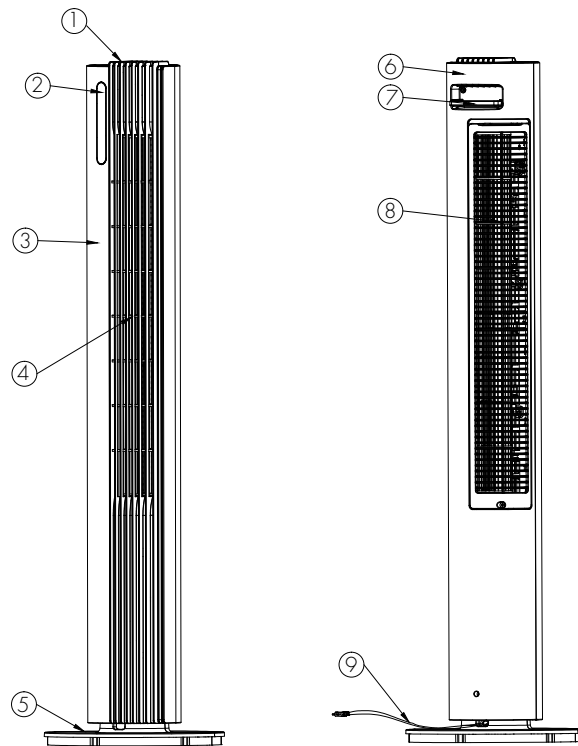

1. Control panel
2. Display
3. Front panel
4. Air outlet
5. Base
6. Rear panel

7. Handle and remote controller compartment
8. Filter
9. Power cord

 
INSTALLATION OF BASE

Before operating the fan, you need to assemble the base on the unit.


Step 1: Flip the two parts of the bases and press firmly on both ends to assemble them.

Step 2: Align the U-shaped opening of the base with the power cord outlet, press the back of the base firmly.


Step 3: Hook the four buckles on the base.

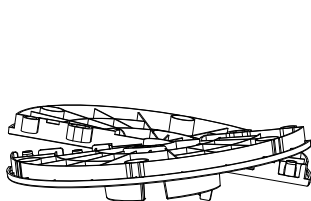

 Step 1

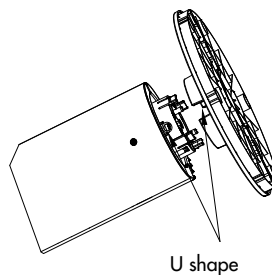

 Step 2

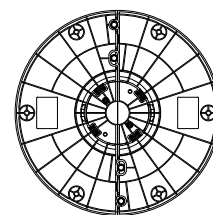

Step 3

FUNCTION CONTROLS

 
BY REMOTE CONTROLLER

How to insert the battery into the remote controller

Open the battery cover on the back of the remote control by pressing the back sideways and pulling the cover in the direction of the arrow (1). Place the battery in the cover, making sure that the polarities are correctly positioned (2). Insert the cover into the remote control.

Use a Lithium/Manganese button battery, model no. CR2032 - 3V (supplied), compliant with Battery Directive no. 2006/66/EC and amendments by Directive 2013/56/EU.

Do not use new batteries with exhausted batteries. If the remote control is not used for a long time, remove the battery. Make sure to dispose of the battery properly.

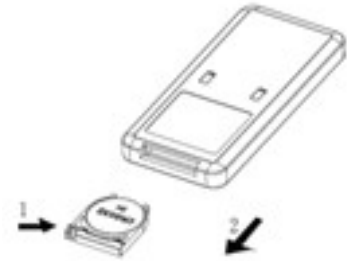

WARNINGS FOR BATTERIES

- Batteries should not be exposed to heat sources such as fire, sun or similar sources;
- remove the batteries if they start to heat up or you know you will not use the appliance for a long time the batteries must be installed correctly in the battery compartment;
- when removing the batteries because they are at the end of their life or damaged, comply with the national regulations in force for disposal (shown below);
- In the event of a battery fluid leak, remove all batteries, taking care not to let the leaked fluid come into contact with skin or clothes.

If liquid from the battery gets on your skin or clothing, wash the skin with water immediately. Before inserting new batteries, thoroughly clean the battery compartment with a dry paper towel, or follow the battery manufacturer's recommendations for cleaning. Only use batteries of the same size and type.

Caution: Danger of explosion if battery is replaced by a type other than that specified.

Improper use of batteries can cause them to leak, overheat, or explode. This liquid is corrosive and can be toxic. It can cause skin and eye burns, and is harmful to ingest.

To reduce the risk of injury:

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, cut or throw batteries into fire.
- Do not mix old and new batteries or batteries of different types
- Do not leave metal objects that could come into contact with the battery terminals and therefore could heat up and/or cause burns.

 


INFORMATION FOR THE CORRECT DISPOSAL OF BATTERIES IN ACCORDANCE WITH EUROPEAN DIRECTIVE 2006/66/EC and amendments Directive 2013/56/EU

Replace batteries when they are depleted. At the end of their life, batteries must be disposed of separately from unsorted waste. They must be taken to designated recycling centres or returned to a retailer providing this service. Separate disposal of batteries prevents potential negative effects on the environment and human health due to inadequate disposal, and also allows for recovering and recycling their constituent materials, resulting in significant savings in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the battery. Illegal disposal of the product by the user implies administrative sanctions applied as per current regulations.


FOR OPTIMAL REMOTE CONTROLLER OPERATION, POINT THE TRANSMITTER HEAD TOWARDS THE RECEIVER LOCATED ON THE FAN.

CONTROL BY REMOTE CONTROLLER

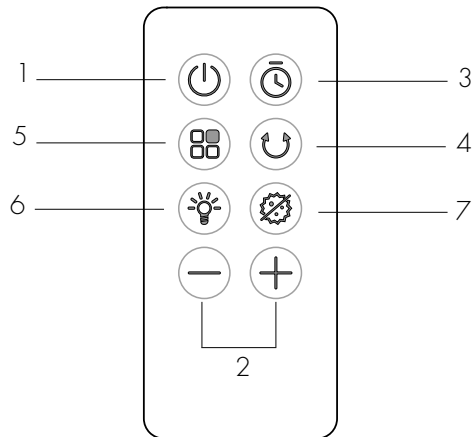


- 1. ON/OFF button
- 2. + - buttons
- 3. Timer button
- 4. Swing button
- 5. Mode button
- 6. Light button
- 7. Purification button

 CONTROL BY CONTROL PANEL

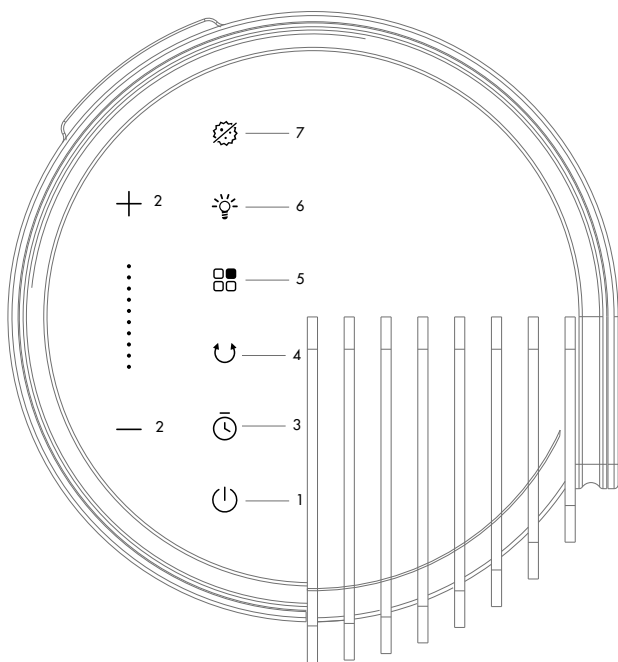

- 1. ON/OFF button
- 2. + - buttons
- 3. Timer button
- 4. Swing button
- 5. Mode button
- 6. Light button
- 7. Purification button

 DISPLAY

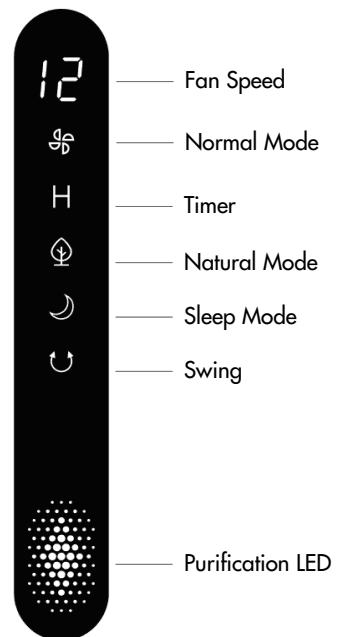


- 12 — Fan Speed
- Normal Mode
- Timer
- Natural Mode
- Sleep Mode
- Swing
- Purification LED

FUNCTION OF THE KEYS ON THE REMOTE CONTROL AND CONTROL PANEL

Before starting to use the fan, it is necessary to assemble the base and attach it to the body of the product. When the fan is turned on for the first time, two beeps are emitted, all the LEDs on the control panel light up for 1 second and the appliance enters Stand-By mode.

When turned on, the fan defaults to Normal mode.

 1. ON/OFF BUTTON


In Stand-by mode, press this button on the control panel or remote control to turn the appliance on and off. When switched on, the fan speed is 4, which will be displayed on the display and the LED  remains on.


2. + - BUTTONS

Press the + - buttons on the control panel or remote control to adjust the fan speed and set the Timer.

3. TIMER BUTTON

Press this button on the control panel or remote control to set the On or Off Timer.

When the unit is on, press the Timer button to select the off interval, then press the + - buttons (adjustment range from 1 to 12 hours), the LED  on the display lights up. After selecting the desired time, the set time and fan speed will be displayed at 10-second intervals.

When the unit is in Stand-by mode, press the Timer button to select the on interval, then press the + - buttons (adjustment range from 1 to 12 hours), the LED  on the display lights up, while the set on time flashes.

4. SWING BUTTON

Press this button on the control panel or remote control to activate or deactivate the automatic oscillation function of the appliance, the LED  lights up on the display.

 
5. MODE BUTTON


Press this button on the control panel or remote control to select the operating mode, which adjusts the fan speed according to the selected program. The fan modes in the following circular sequence are: Normal - Natural - Sleep.


Normal Mode: When this mode is selected, the LED  lights up on the display and the appliance operates constantly at the selected ventilation speed, which can be viewed on the display. It is possible to select up to 12 ventilation speeds, using the + - buttons to set the desired one.


Natural Mode: The unit operates according to a predefined program, with variable speed from 1 to 12, to create a natural breeze effect. The effect changes depending on the selected speed. Below is the operating diagram of the Natural mode depending on the set ventilation speed:


High speed: corresponds to speeds 9-12 in Normal mode, the control panel shows the LED corresponding to the speed in operation and the LED .

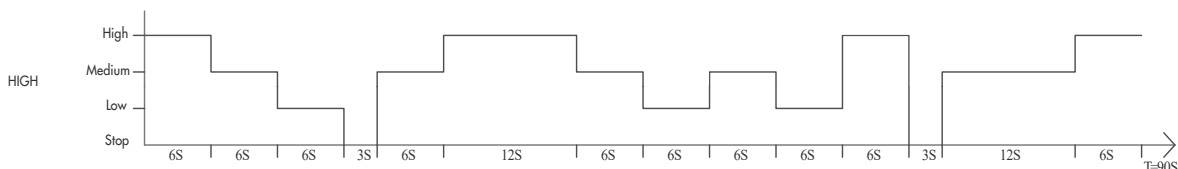

 
Medium speed: corresponds to speeds 5-8 in Normal mode, the control panel shows the LED corresponding to the speed in operation and the LED .

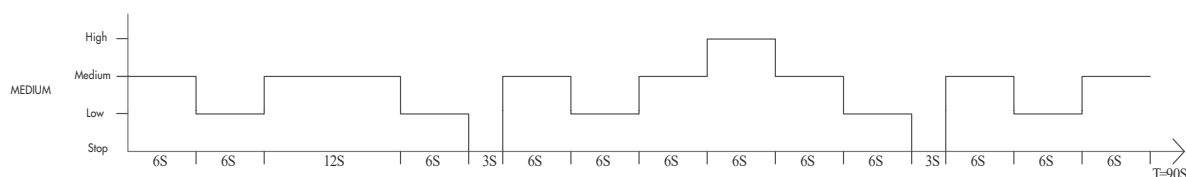

 
Low speed: corresponds to speeds 1-4 in Normal mode, the control panel shows the LED corresponding to the speed in operation and the LED 

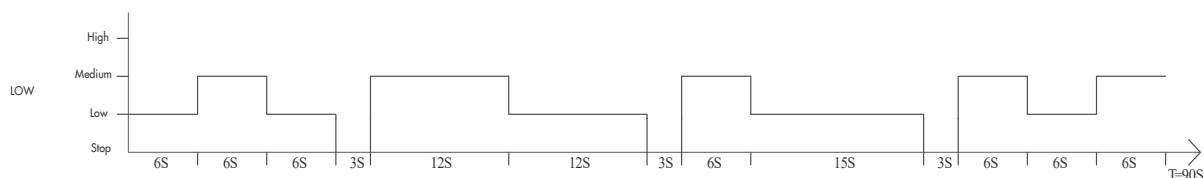

Sleep Mode: Depending on the speed set, the unit will reduce the fan speed according to predefined steps:

If the selected speed is between 4 and 12, the speed will decrease every 5 minutes, up to 3, then it will continue to operate at this speed. The LED  lights up on the display.


If the selected speed is between 1 and 3, the speed will decrease to 3, then it will continue to operate at this speed. The LED  lights up on the display.

6. LIGHT BUTTON

Press this button on the control panel or remote control to turn the display and button illumination on the control panel on or off. To reactivate the buttons, press any button on the control panel.

7. PURIFICATION BUTTON

Press this button on the control panel or remote control to activate or deactivate the plasma purification function that allows the release of positive and negative ions, capable of neutralizing allergens present in the environment.

When this function is activated, the LED  lights up on the display

It is possible to select the purification function with all the other functions of the unit.

BRIGHTNESS REDUCTION FUNCTION

If no selections are made, after 1 minute the LEDs on the control panel automatically reduce the brightness, to reactivate it press any button on the control panel.

SMART MEMORY FUNCTION

In the presence of power the unit memorizes the last settings, except the Timer. In the event of a blackout, it restarts only manually and with the default settings, speed 4.

CARE AND MAINTENANCE

WARNING!

Before carrying out any cleaning or maintenance operations, unplug the appliance.

IMPORTANT: DO NOT SUBMERGE THE FAN IN WATER.

1. Cleaning the casing

Turn off the fan and remove the plug before cleaning. To move the appliance, always use the handle located on the back of the appliance.

Use a soft cloth to remove dust from the product. If this is not enough, use a soft cloth moistened with water and neutral detergent at a temperature below 40°C.

Let the appliance dry completely before using it.

Do not apply corrosive cleaners or solvents such as benzene. Do not wash the appliance with water.

When cleaning, do not use oils, chemicals or other objects that could damage the surface.

Use a vacuum cleaner to remove dust from the air inlet and outlet grilles.

2. Storage

During periods of non-use, unplug the power cord and store the appliance together with this manual in the original box in a cool, well-ventilated place.

3. For complete safety, regularly check the condition of the power cord; should it be damaged as a result of wear, contact the Service Centre to replace it.



INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2012/19/EU

At the end of its working life this equipment must not be disposed of as a household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.



improve your life

www.argoclima.com

Argoclima assumes no responsibility for any errors or inaccuracies in the content of this manual and reserves the right to make to this, at any time and without notice, any changes deemed appropriate for any technical or commercial need.